


# Assembly Instructions - Rugged Mount

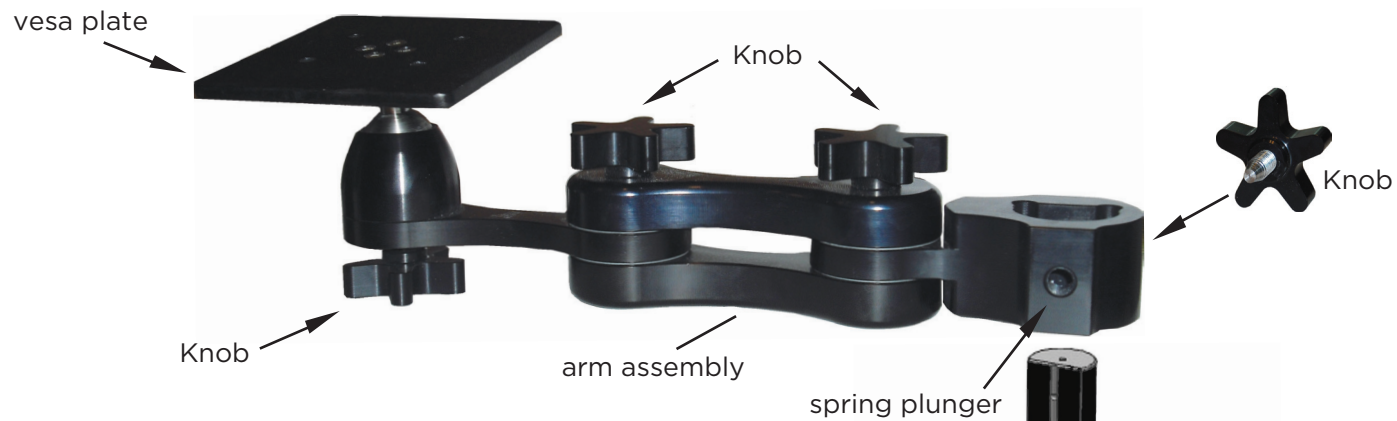

## Tools Required:

- 8mm Allen Key (supplied)

## Instructions:

1. Attach base plate to base of post using the M12 flat head screw (with 8mm allen key supplied). The plate has eight (8) possible locations.
2. Slide arm assembly over the post, the spring plunger locates every 1 inch vertically on the post. Once located at the required height, screw in the knob on the opposite side. To adjust, unscrew the knob until disengaged from post - adjust height and tighten the knob.
3. Attach laptop as required.
4. Loosen the three (3) knobs to adjust position of arm and tighten knobs.

