



Assembly Instructions - The Boa

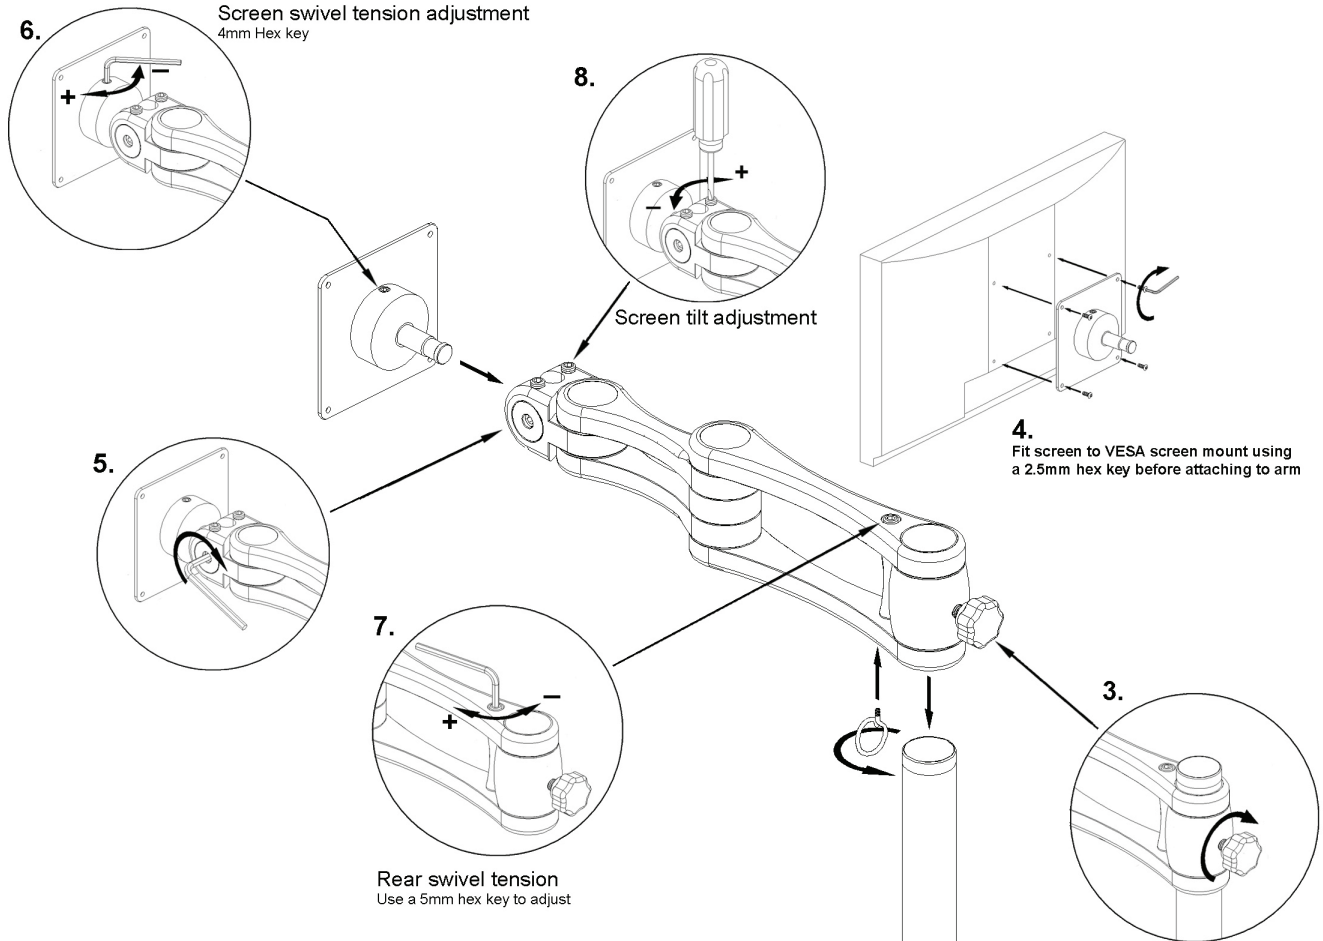

- Tools Required**
- 1 x 8mm hex key (Wall mount only)
 - 1 x 5mm hex key
 - 1 x 4mm hex key
 - 1 x 2.5mm hex key
 - 1 x 19mm Wrench (Through desk & Cable grommet only)

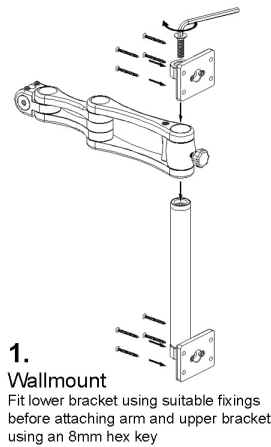

2.
Post fitting options

