

Assembly Instructions - The Lift and Lock

wedge receiver




arm assembly

Tools Required:
- 3/16 " Allen Key

Instructions:

1. Assemble the pair of connecting arms to wheelchair.
2. Slide socket bar into connectors.
3. Install 6" vertical bar into socket bar.
4. Install arm assembly onto 6" vertical riser.
5. Any attachment is attached with the quick release wedge receiver.

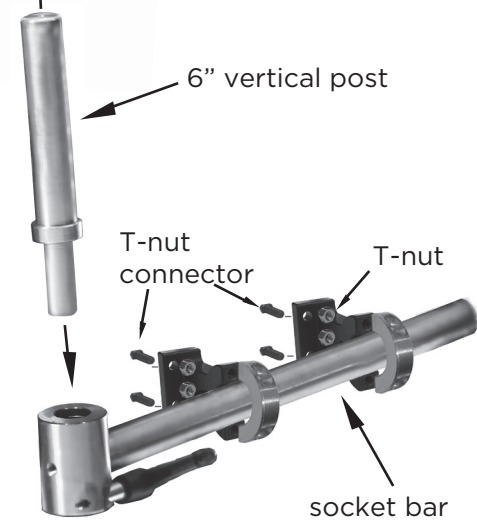

6" vertical post

T-nut
connector

T-nut

socket bar

Monitors 
in Motion